




Quarrix®

# ProTect

## FURRING STRIPS

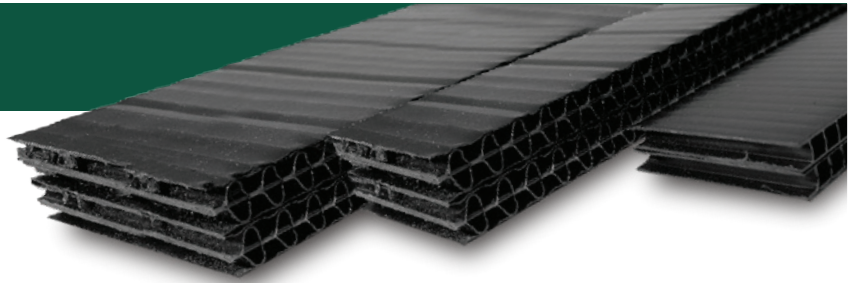

### INSTALLATION INSTRUCTIONS

#### STEP 1

Once house wrap has been installed, install Quarrix ProTect Furring Strip horizontally just below the soffit, at the very top of the house wall. Also install a ProTect Furring Strip horizontally at the bottom of the wood on the house wall.

#### STEP 2

When using a thicker siding, install a second ProTect Furring Strip on top of the horizontal Furring Strips to all the siding to lay flat.

#### STEP 3


Install ProTect Furring Strips every 16" on center using fasteners that penetrate plywood 1/2".

#### STEP 4

Quarrix ProTect Furring Strips should be installed approximately 1" from the edge of the wall. Furring Strips should also be used under trim, in corners and around windows. The Furring Strips should be installed to support the width of the trim.

#### STEP 5

Attach siding according to manufacturers' specifications and building codes using fasteners long enough to sufficiently penetrate into framing.

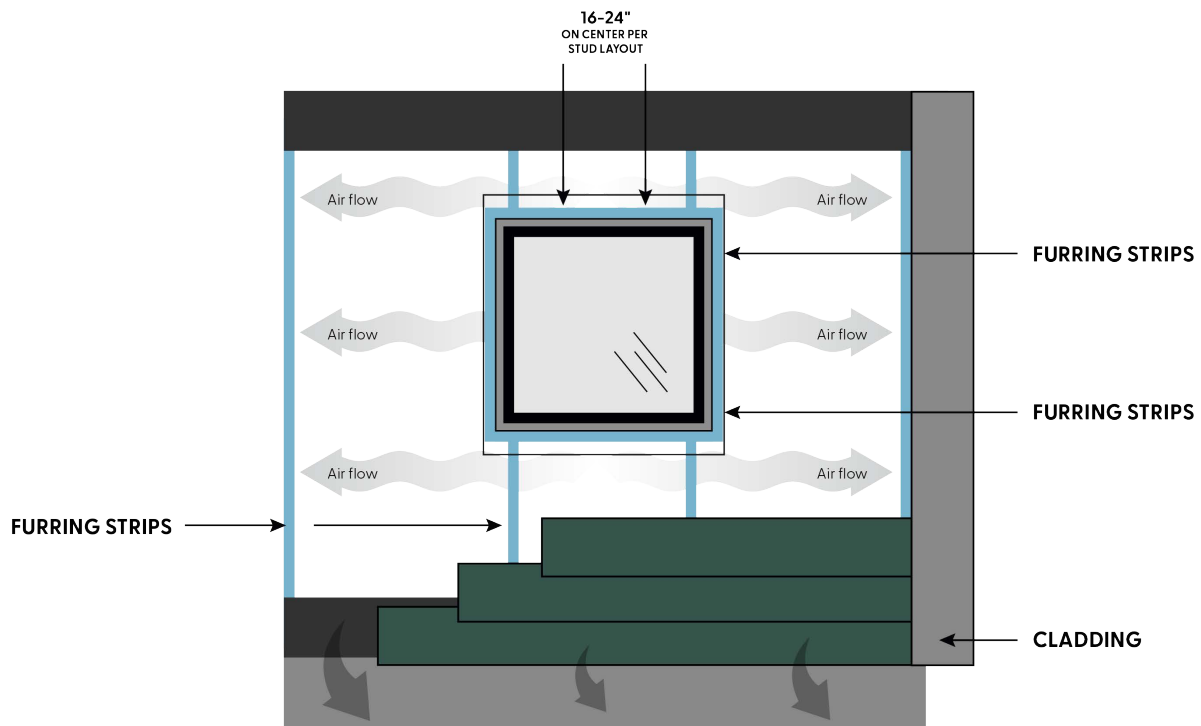

AIR FLOW AND MOISTURE

