


PRODUCT TO USE:



TILE BATTENS

Installation Instructions

Step 1

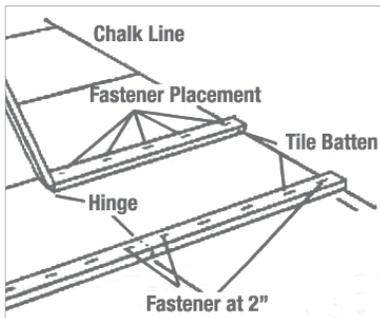


Unfold Quarrix Tile Batten to full 8-foot length and align along pre-chalked line. Nail or staple 2" in from the starting edge. Move over to the hinge of the Tile Batten and nail or staple 2" from hinge of the fold. Note: Power nail or staple tools can be used to place fasteners.

Step 2

Place a nail or staple 10" in from each of the fasteners that have already been placed. Place an additional nail or staple in the middle of the section for a total of 5 fasteners per 4-foot section of batten.

Repeat on other side of 4-foot section of the batten. Use this nail or staple pattern when fastening the remaining battens to the roof deck. Fasteners should penetrate the roof deck a minimum of 1/2". See manufacturer's specifications. Note: Use a utility knife when cutting the tile batten to desired length.

Step 3

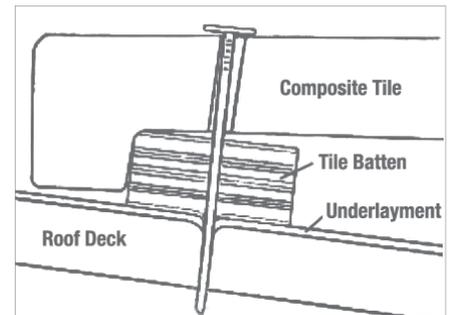

If fasteners are used to secure the tile to the roof, the penetration of the fastener must be into the roof deck for structural hold* according to the manufacturer's specification.

*Quarrix Tile Batten cannot be used for structural support of the tile.

PRODUCT TO USE:



FURRING STRIPS

Installation Instructions

Step 1

Once house wrap has been applied, install a 3/4" (19 mm) Quarrix Furring Strip horizontally just below the soffit at the very top of the house wall. Also install a 3/4" (19 mm) Furring Strip horizontally at the bottom of the wood on the house wall.

Step 2

Install 3/8" (10 mm) Furring Strip every 16" on center using fasteners that penetrate plywood 1/2".

Step 3

Furring Strips should be installed approximately 1" from the edge of the wall. Furring Strips should also be used under trim, in corners and around windows. The furring strips should be installed to support the width of the trim.



Step 4

Attach siding according to building codes using fasteners long enough to sufficiently penetrate into framing.

