


Quarrix®

ProTect

SIDING STARTER

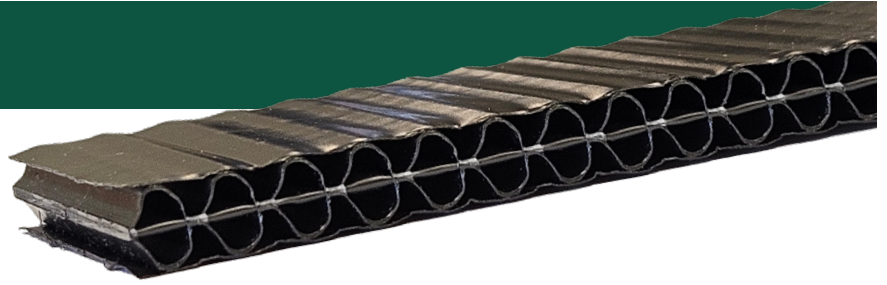

INSTALLATION INSTRUCTIONS

STEP 1

After installing the water-resistant barrier (WRB), ensure that surfaces are dry and devoid of ridges, warps, or voids.

STEP 2

Install siding starter over the WRB and even with the bottom of the sheathing. Nail or screw the siding starter in place with a non-corrosive fastener.

STEP 3

Install the first course of siding according to manufacturer's specifications and local building codes so that the bottom end of the siding slightly overlaps the bottom of the Siding Starter. Be sure to use fasteners long enough to penetrate into the framing. Once in place, keep running the siding up to the top wall.

